


# BetterView

## Measuring Guide

## ***REQUIRED***

Tape Measure

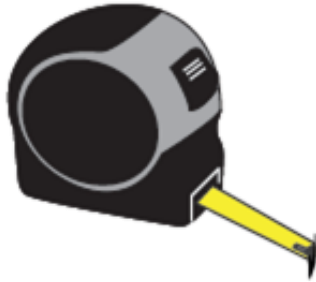

Pencil



Spirit Level



---

## ***OPTIONAL***



Laser Distance Measure




2-way Laser Level



Applicable for “pull-down” and “pull-across” orientations.

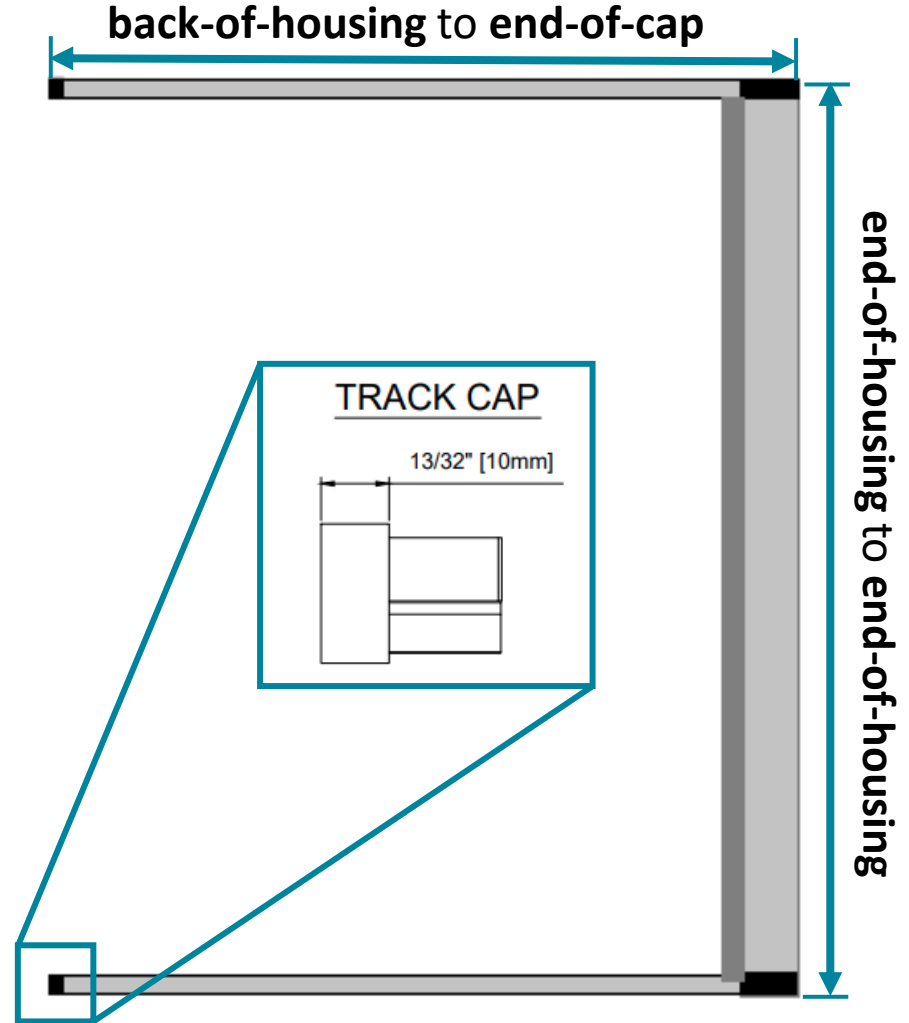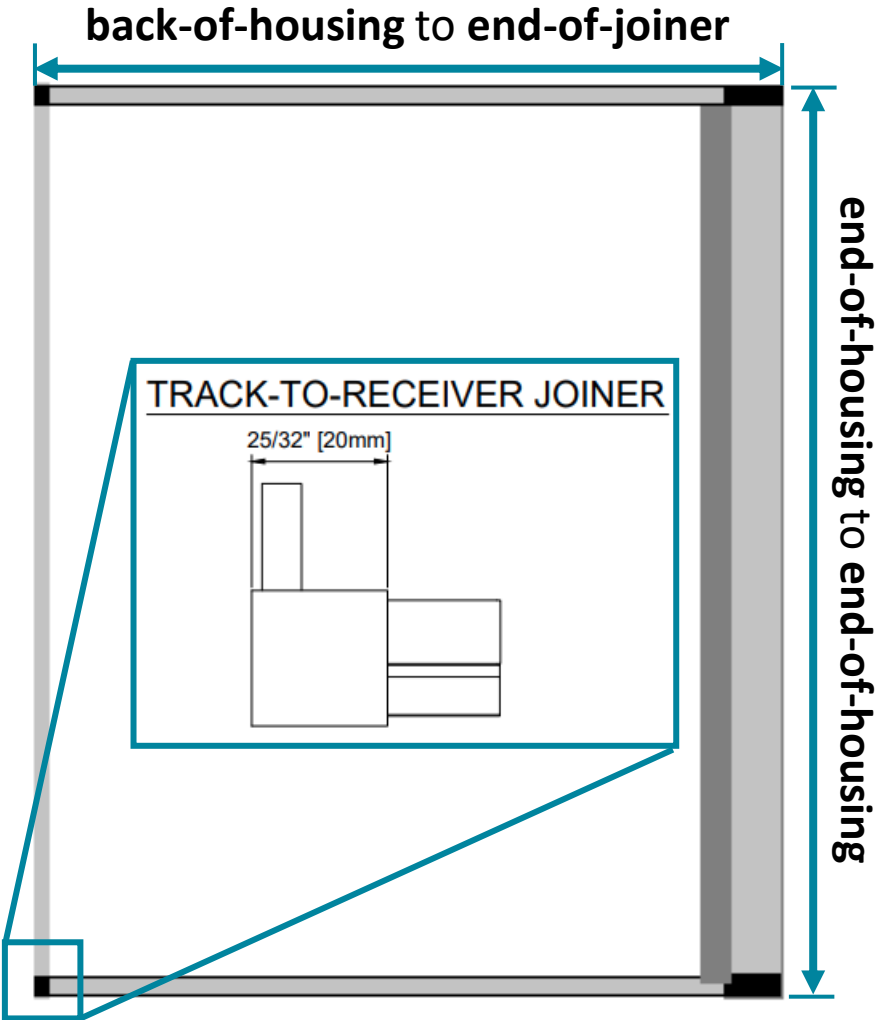

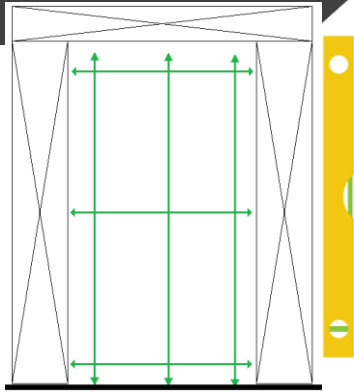

Check opening for **plumb, level, straight, and square.**  
Establish marks with level if necessary.

The **additions/deductions** are suggested.

Mounting Method	Measurements	Addition/Deduction		
		Width	Height	With BetterSill Adapter
In-Jamb Fit	Record <b>smallest</b> WxH measurements	0"	-1/16" (safety)	-1/8" extra
Face Fit <b>resting on threshold</b>	Record <b>largest</b> WxH measurements	+3" (housing and receiver thickness)	+3/4" (upper track thickness)	-1/8" extra
Face Fit	Record <b>largest</b> WxH measurements	+3" (housing and receiver thickness)	+1 1/2" (upper & lower track thickness)	

**\*NOTE:** Tracks will come at **3" extra** length.

**Cut to size on the field.**

The measuring principles for a PULL-ACROSS can apply for a PULL-DOWN. Just switch **width** and **height** around.

The measuring steps are **suggestions**.  
The installer should determine best practice for each specific application.

## *Measuring Consideration with Receiver*

Receiver *must* be located where it permits operability of the pull bar from **both sides**.

