


BetterView

Measuring Guide

REQUIRED

Tape Measure

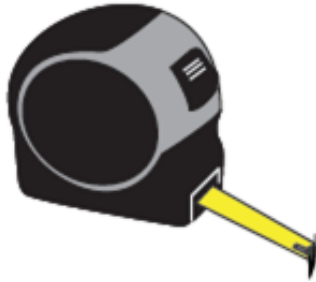

Pencil



Spirit Level



OPTIONAL



Laser Distance Measure




2-way Laser Level



Applicable for “pull-down” and “pull-across” orientations.

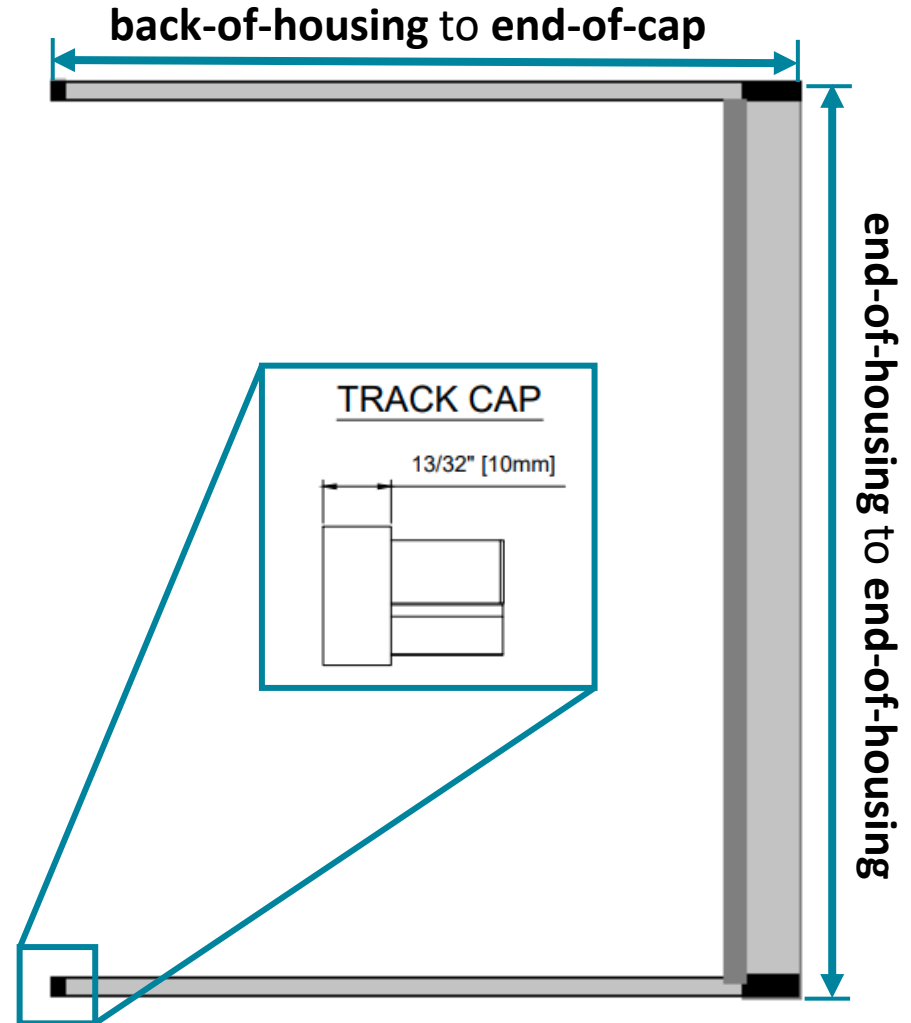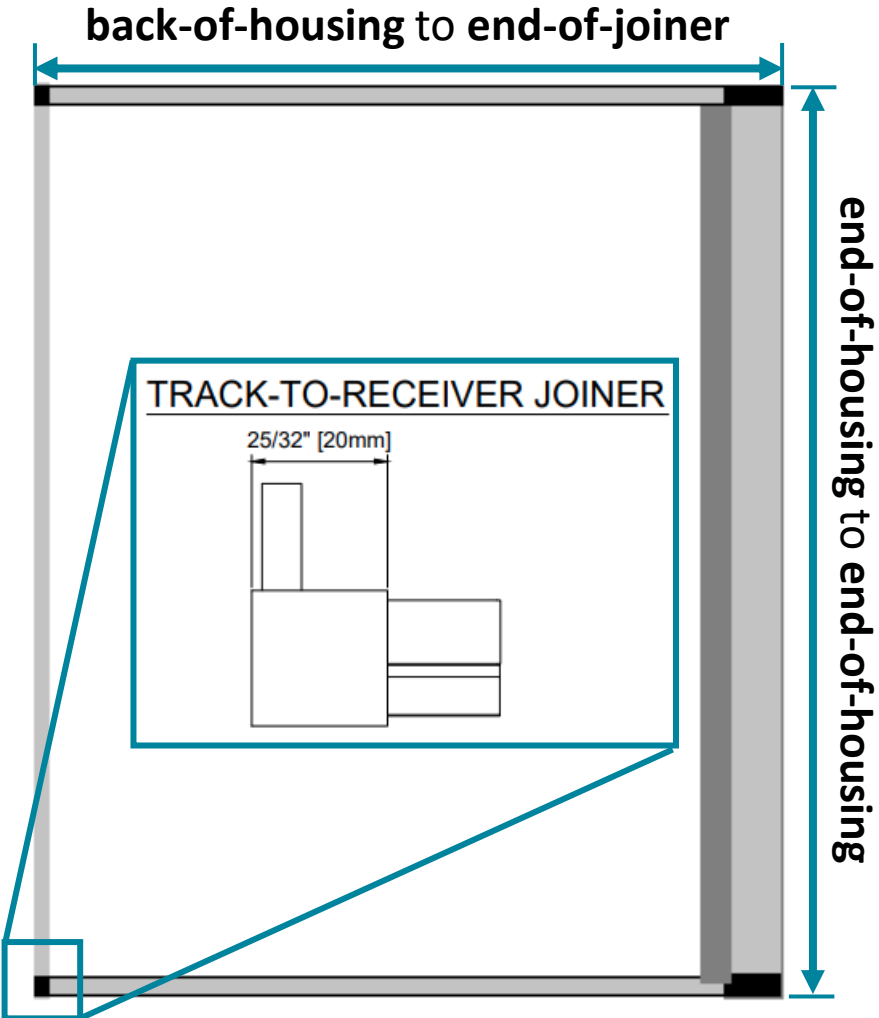

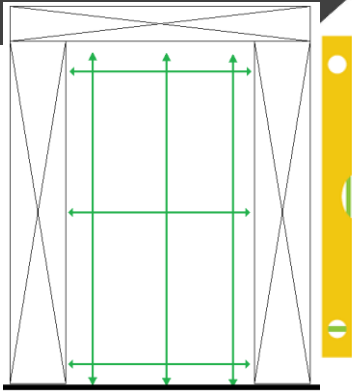

Check opening for **plumb, level, straight, and square.**
Establish marks with level if necessary.

The **additions/deductions** are suggested.

Mounting Method	Measurements	Addition/Deduction		
		Width	Height	With BetterView Adapter
In-Jamb Fit	Record smallest WxH measurements	0"	-1/16" (safety)	-1/8" extra off height
Face Fit resting on threshold	Record largest WxH measurements	+3" (housing and receiver thickness)	+3/4" (upper track thickness)	-1/8" extra off height
Face Fit	Record largest WxH measurements	+3" (housing and receiver thickness)	+1 1/2" (upper & lower track thickness)	

***NOTE:** Tracks will come at **3" extra** length.

Cut to size on the field.

The measuring principles for a PULL-ACROSS can apply for a PULL-DOWN. Just switch **width** and **height** around.

The measuring steps are **suggestions**.
The installer should determine best practice for each specific application.

Measuring Consideration with Receiver

Receiver *must* be located where it permits operability of the pull-bar from **both sides**.

