



Exterior Mounting

Brick Mould Mount


Outer frame mount is the more preferred as it usually does not require increasing the threshold height on the sill (step over)

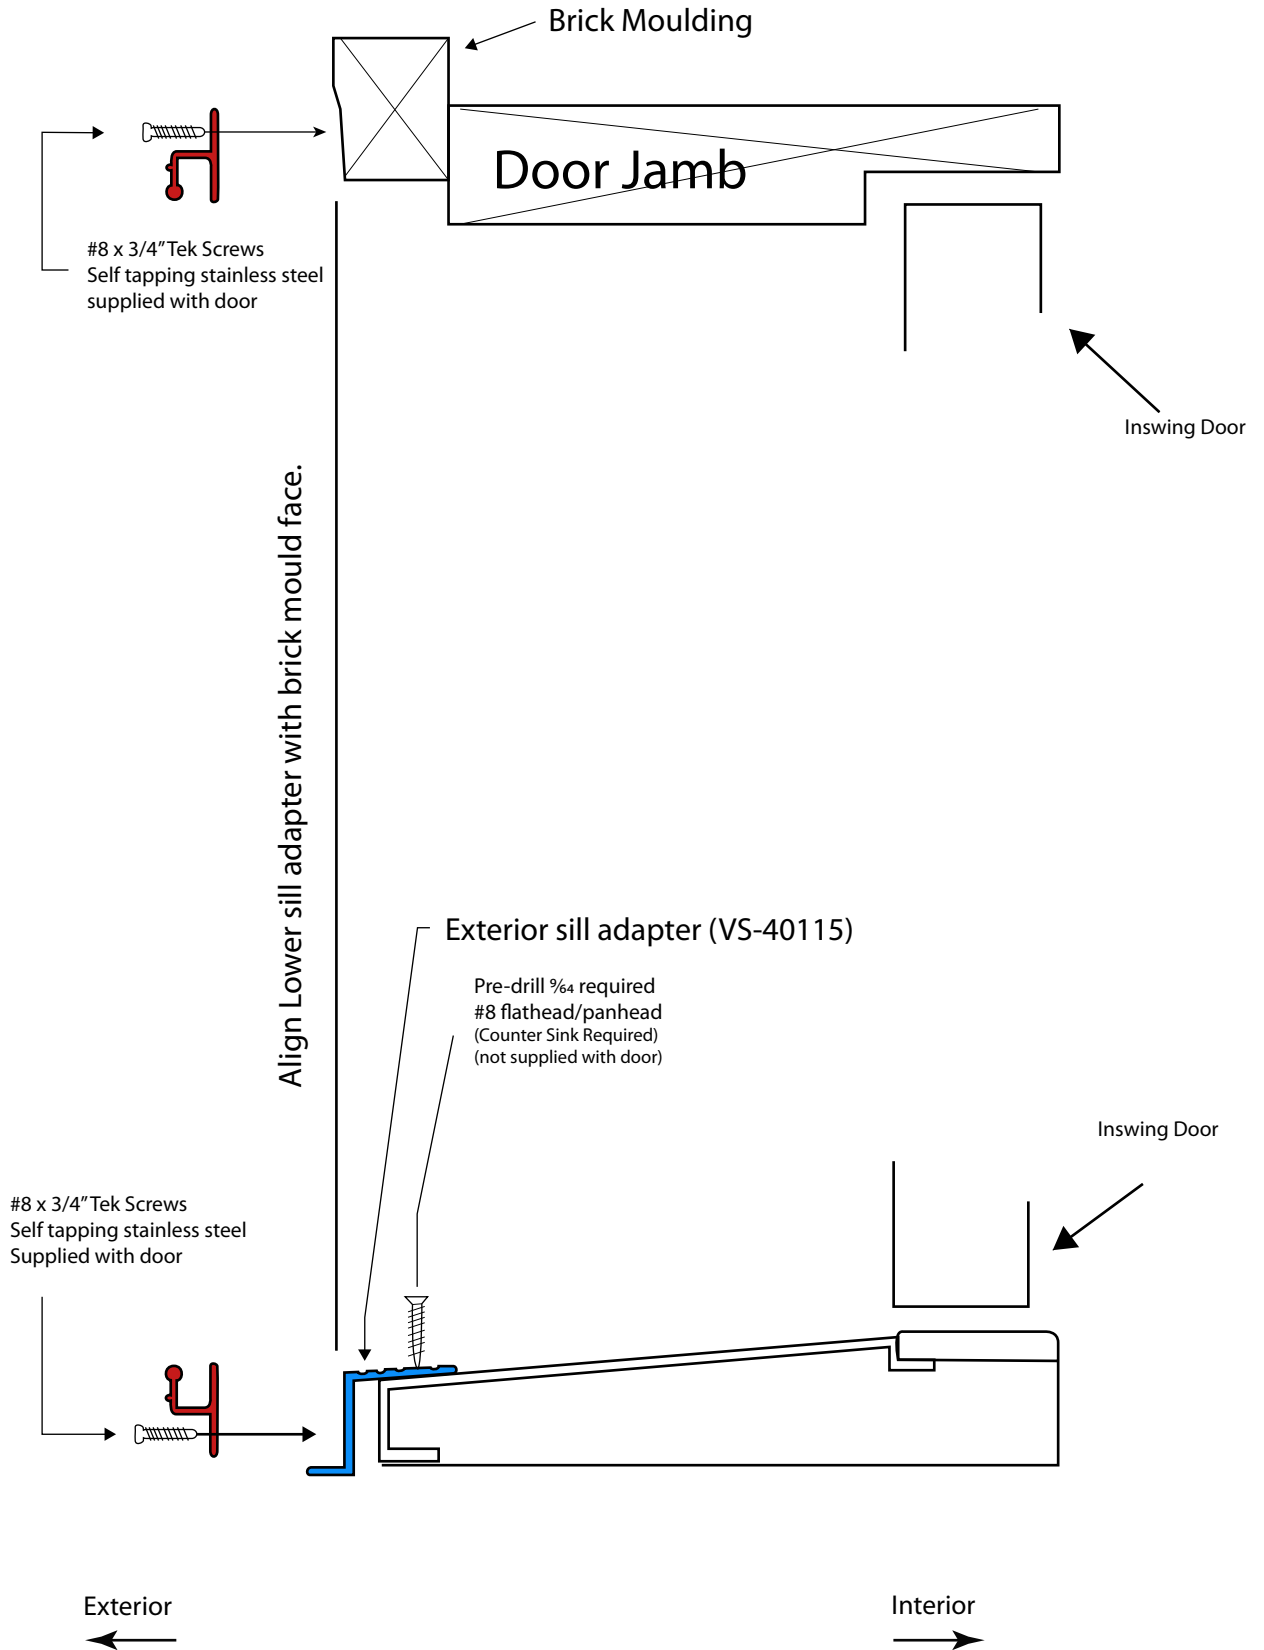


Interior Mounting - Midway Mount Install Diagram

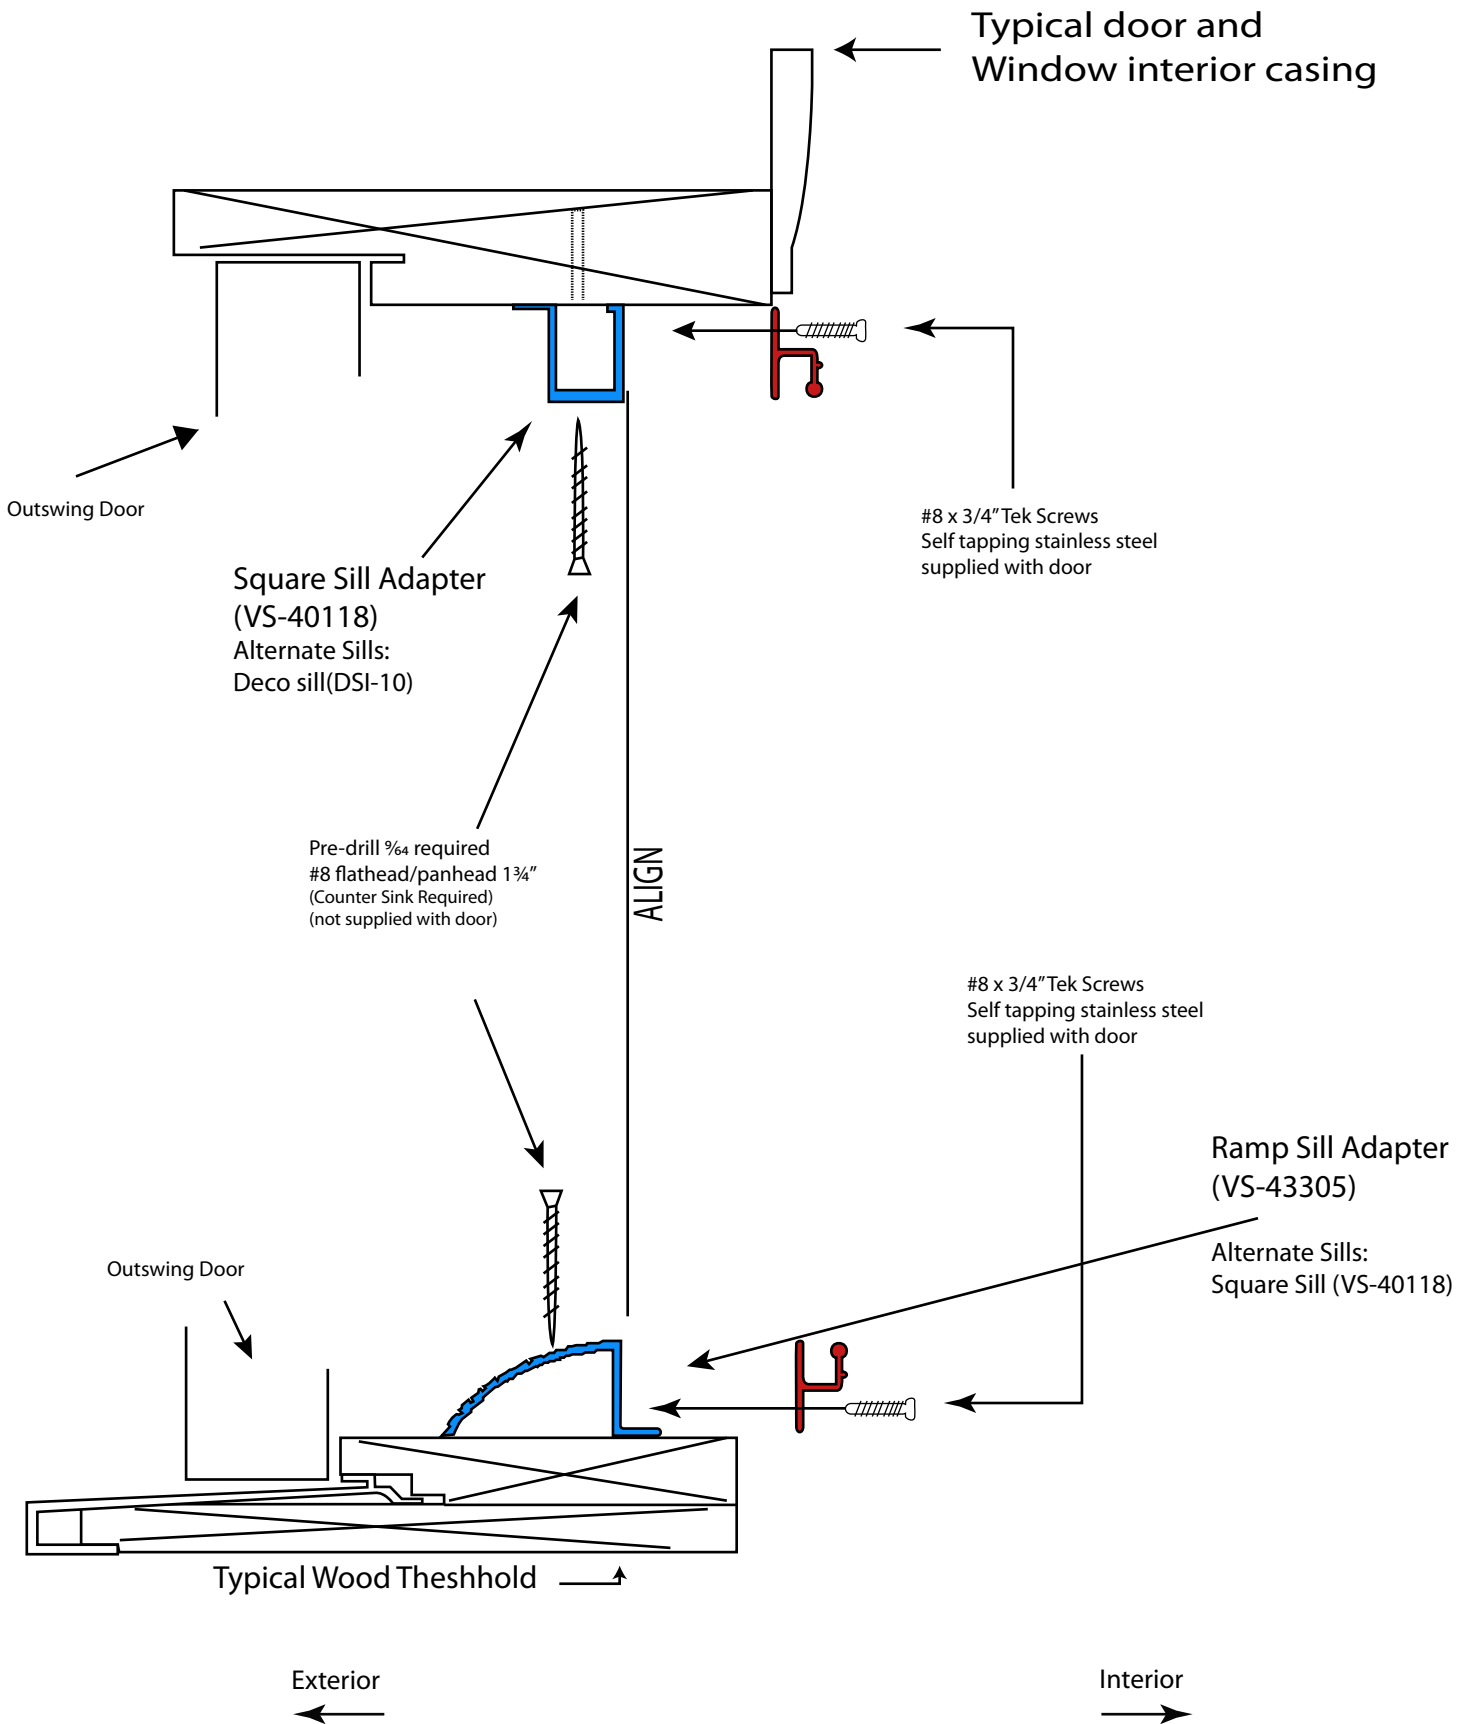

**Interior Mounting-Outer Frame
Outer Frame Mount/Casing**

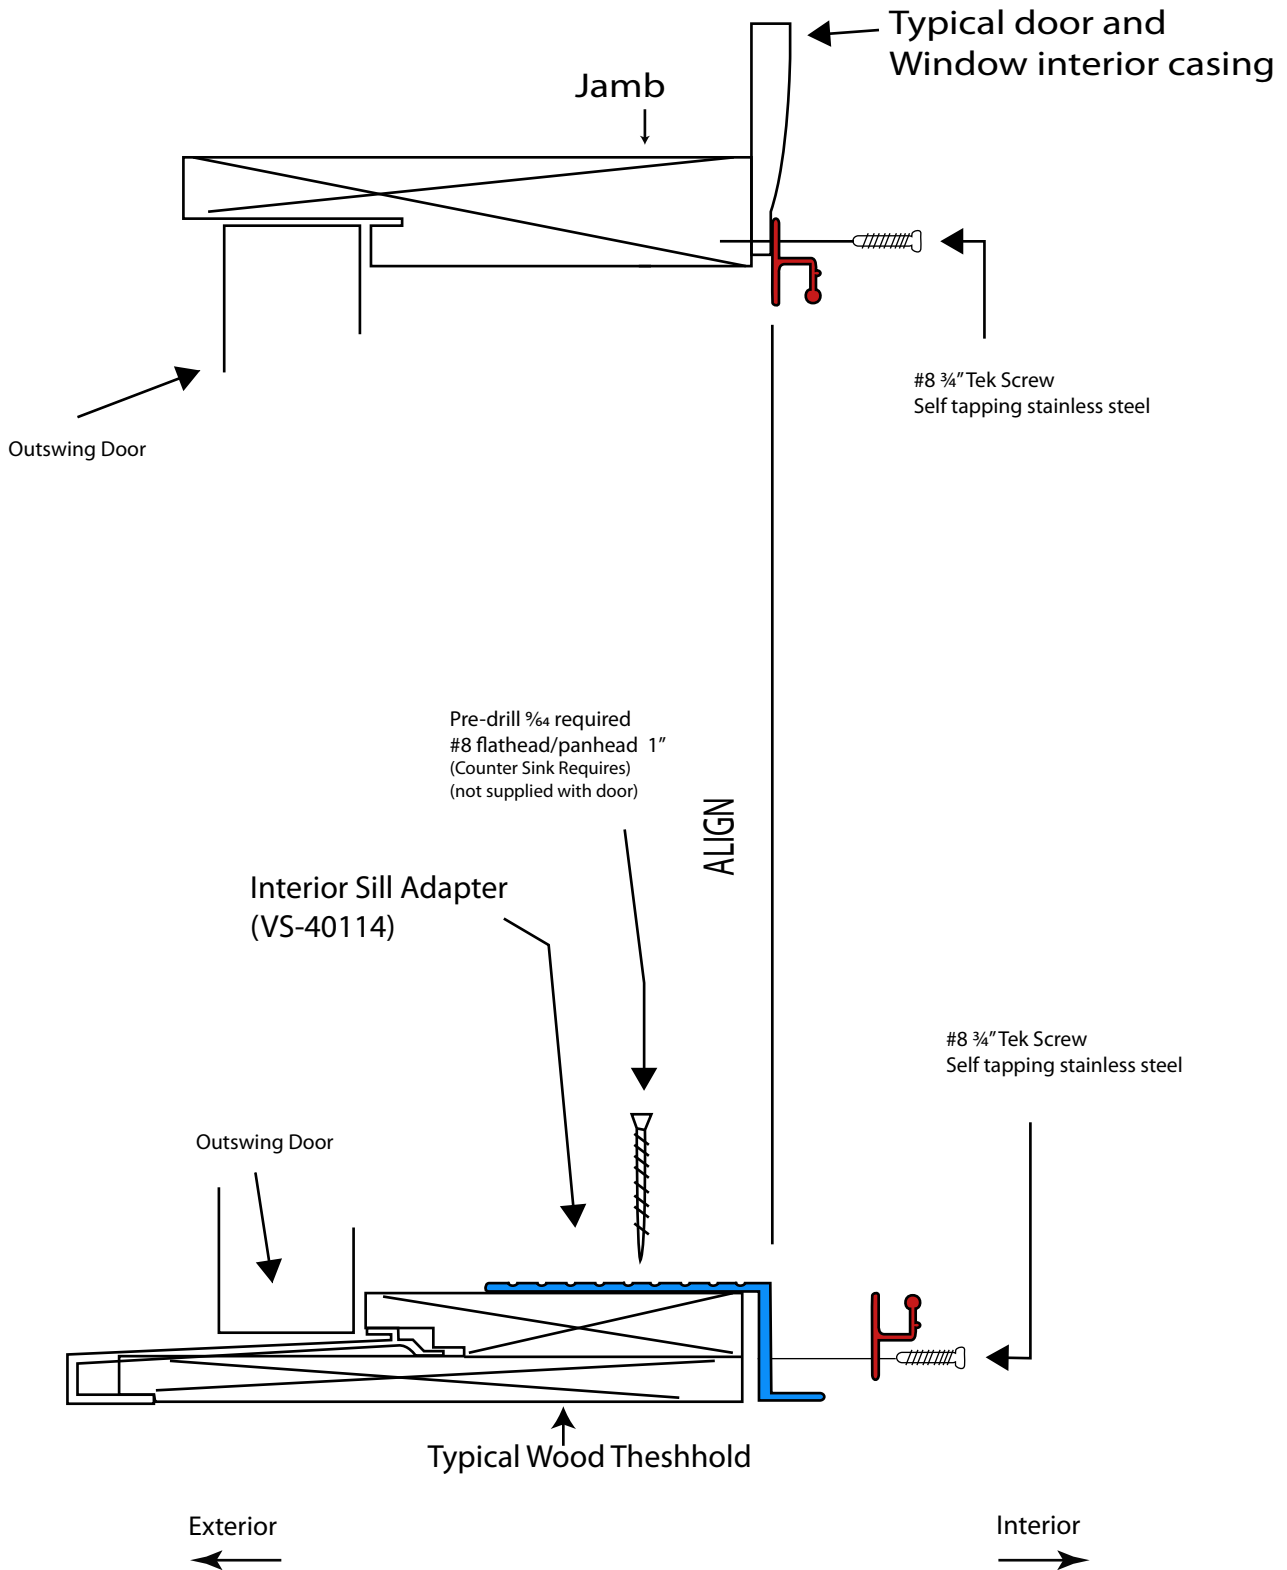


Exterior Mounting – Mid Way Install Diagram

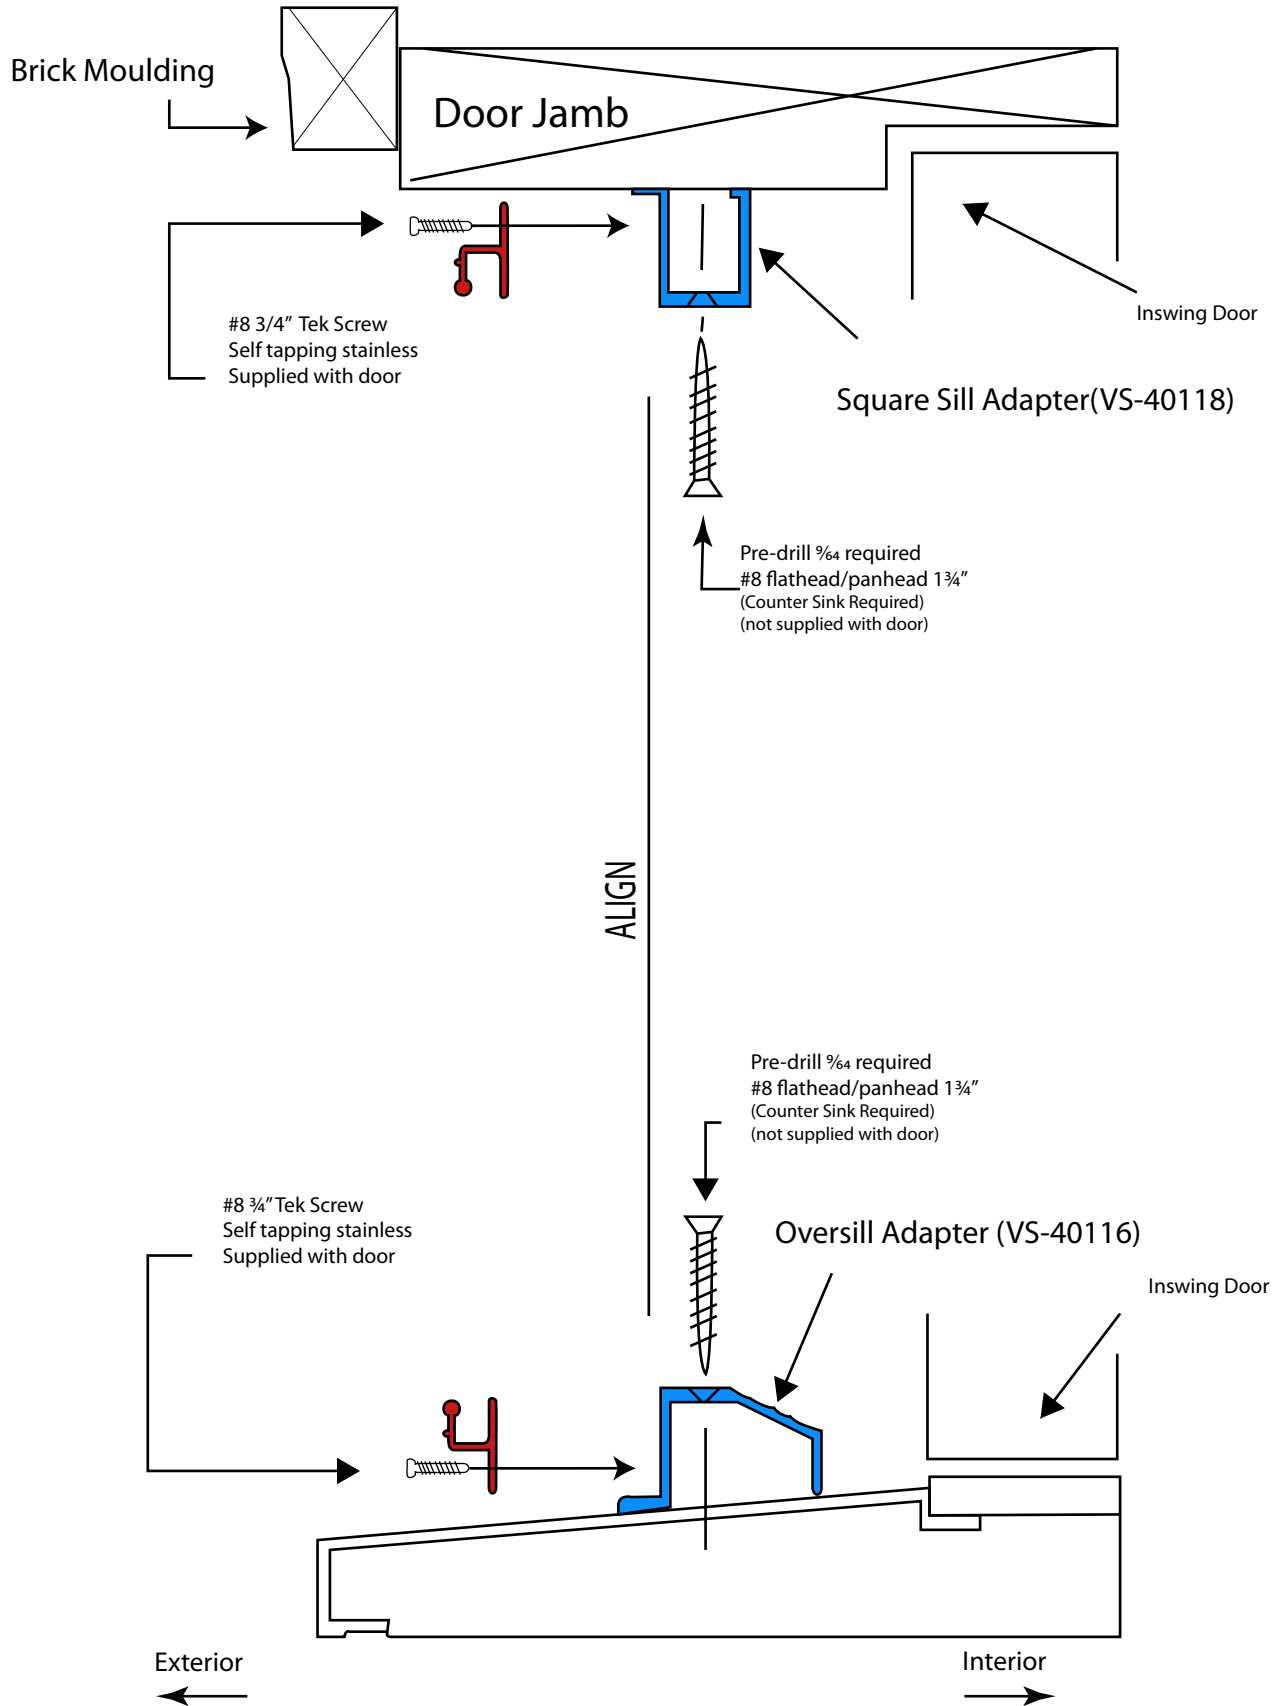

Interior Mounting-Outer Frame Outer Frame Mount

Outer frame mount is the more preferred as it usually does not require increasing the threshold height on the sill (step over) although $\frac{3}{4}$ " hardwood floors finish inside may create a rise of about $\frac{1}{4}$ " to $\frac{1}{2}$ ".

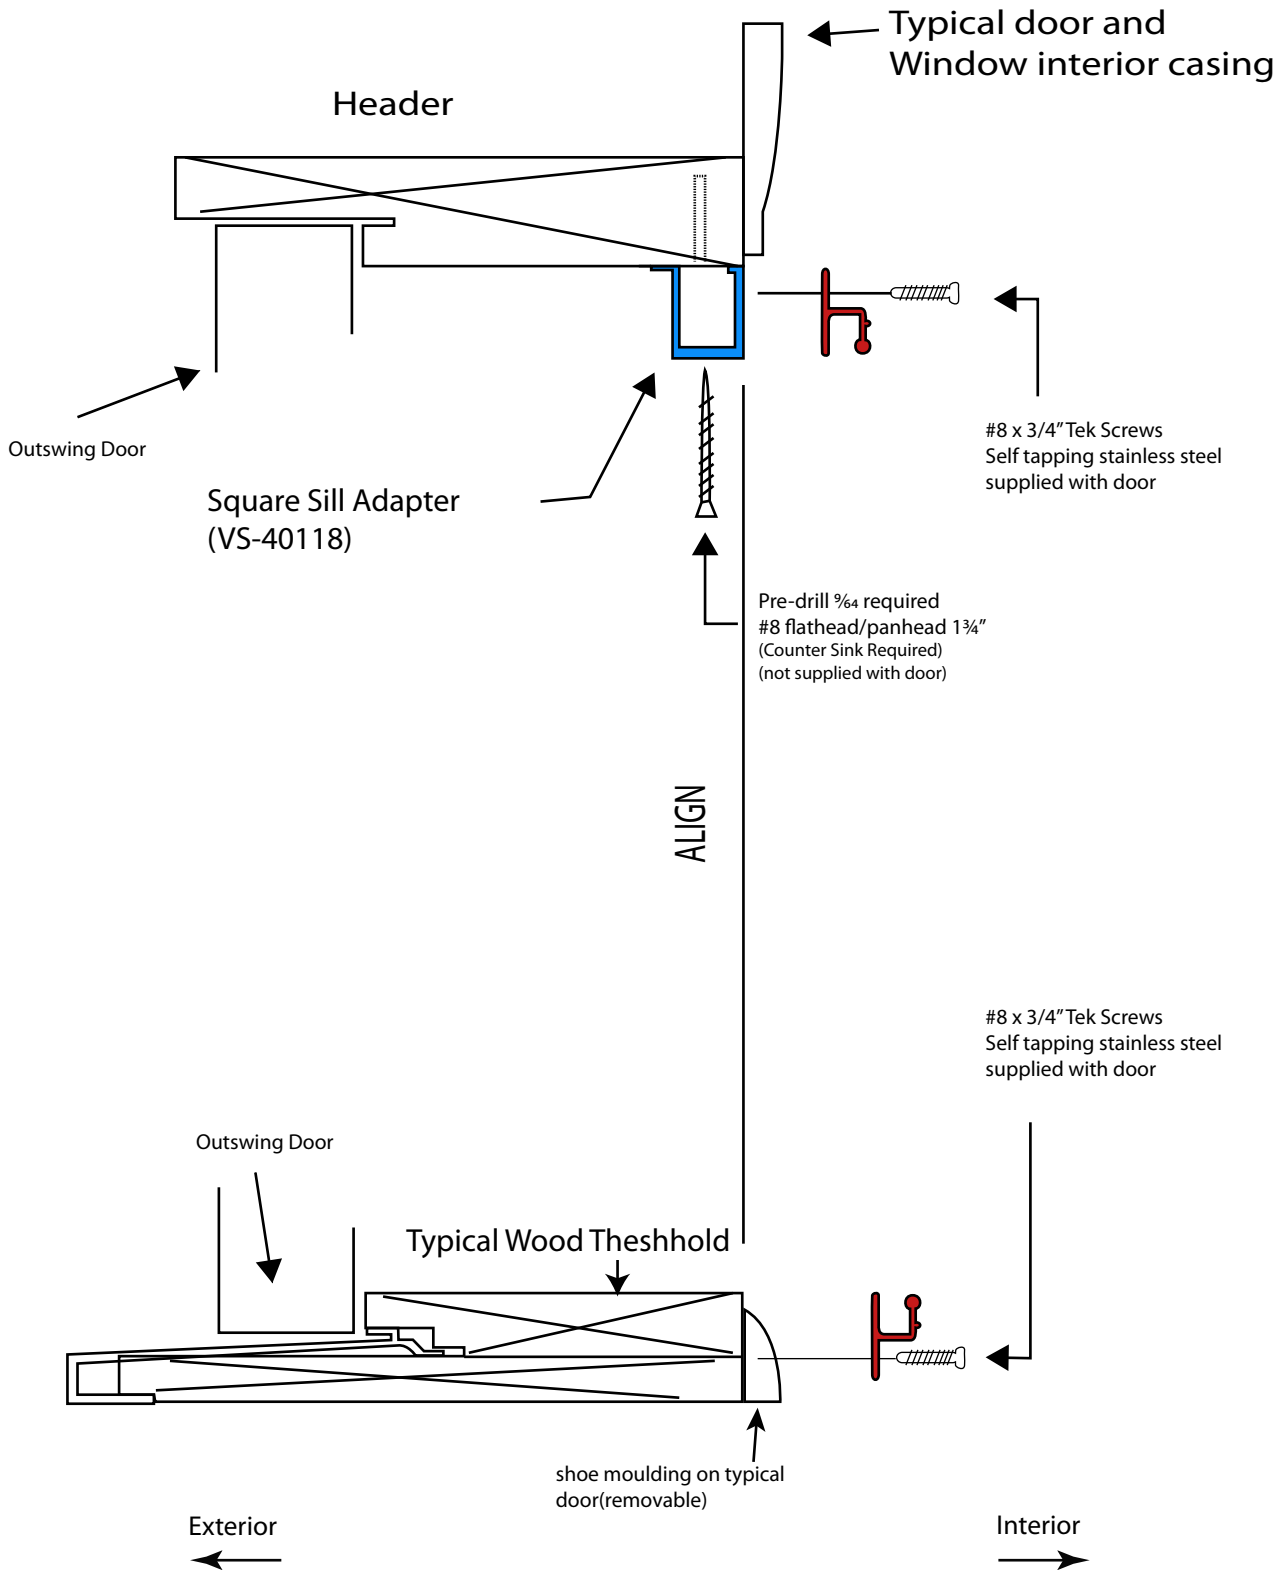

Exterior Mounting- Jamb Install Diagram

